

Quick Installation Guide (VP-EYE Document for IDC-3120)

[1] Have your software license serial number in hand. It is printed on the CD sleeve.

[2] Download the latest VP-EYE Document program from <http://www.versaview.com/download.htm>

[3] Unzip the downloaded file (Fig. 1)

[4] Open the VP67_xxxx folder and run "setup.exe". (Fig. 2)

[5] Confirm to install, press "next". (Fig. 3)

[6] Accept the license agreement, mark "accept" and click "Next". (Fig. 4)

[7] Input the user name, company name and serial number, then "Next". (Fig. 5)

[8] Select program folder, then "Next". (Fig. 6)

[9] Installation proceeds (Fig. 7). When complete (Fig. 8), click "Finish". A "VP-EYE Document" icon appears on the desktop (Fig. 9). Now you are ready to plug&play the IDC-3120 document camera.

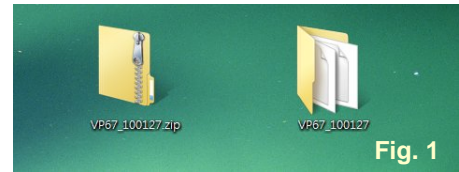


Fig. 1

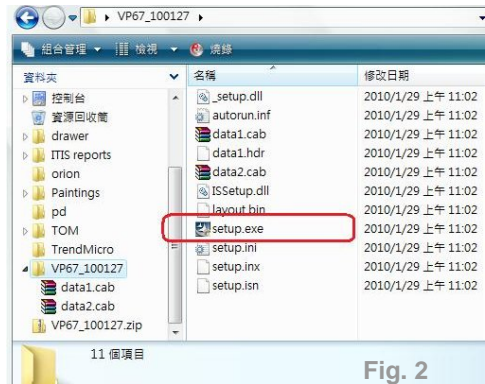


Fig. 2

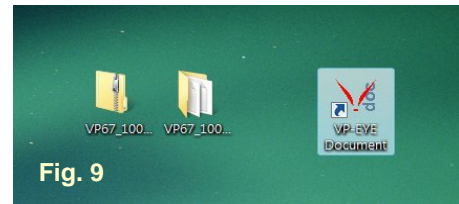


Fig. 9

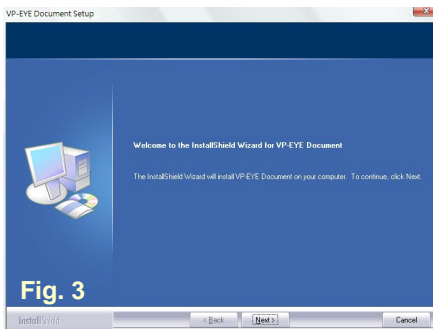


Fig. 3

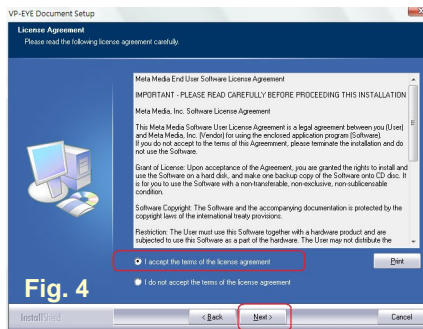


Fig. 4

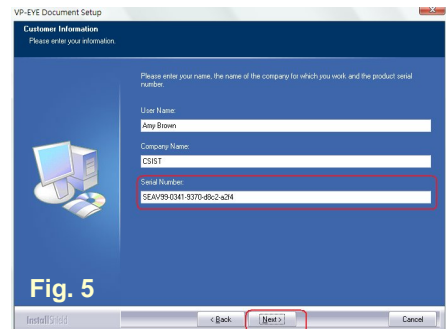


Fig. 5

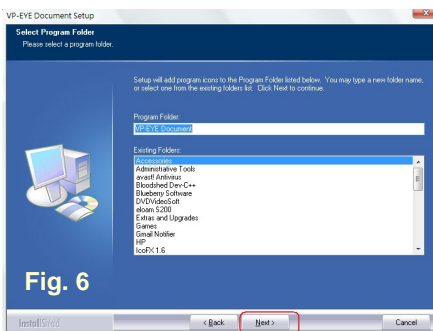


Fig. 6

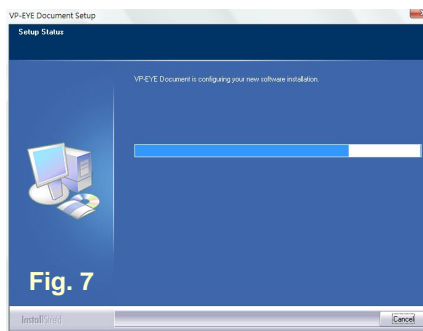


Fig. 7

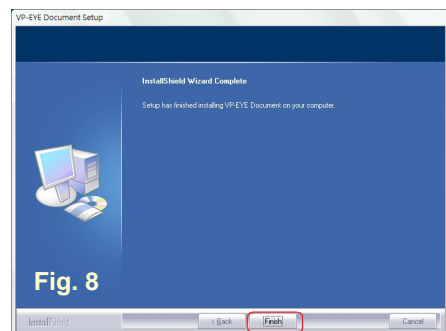


Fig. 8